



REV	MCO	DWN	DATE
A	20093716	MJW	15-JUN-01
B	20239114	AED	01-MAY-08


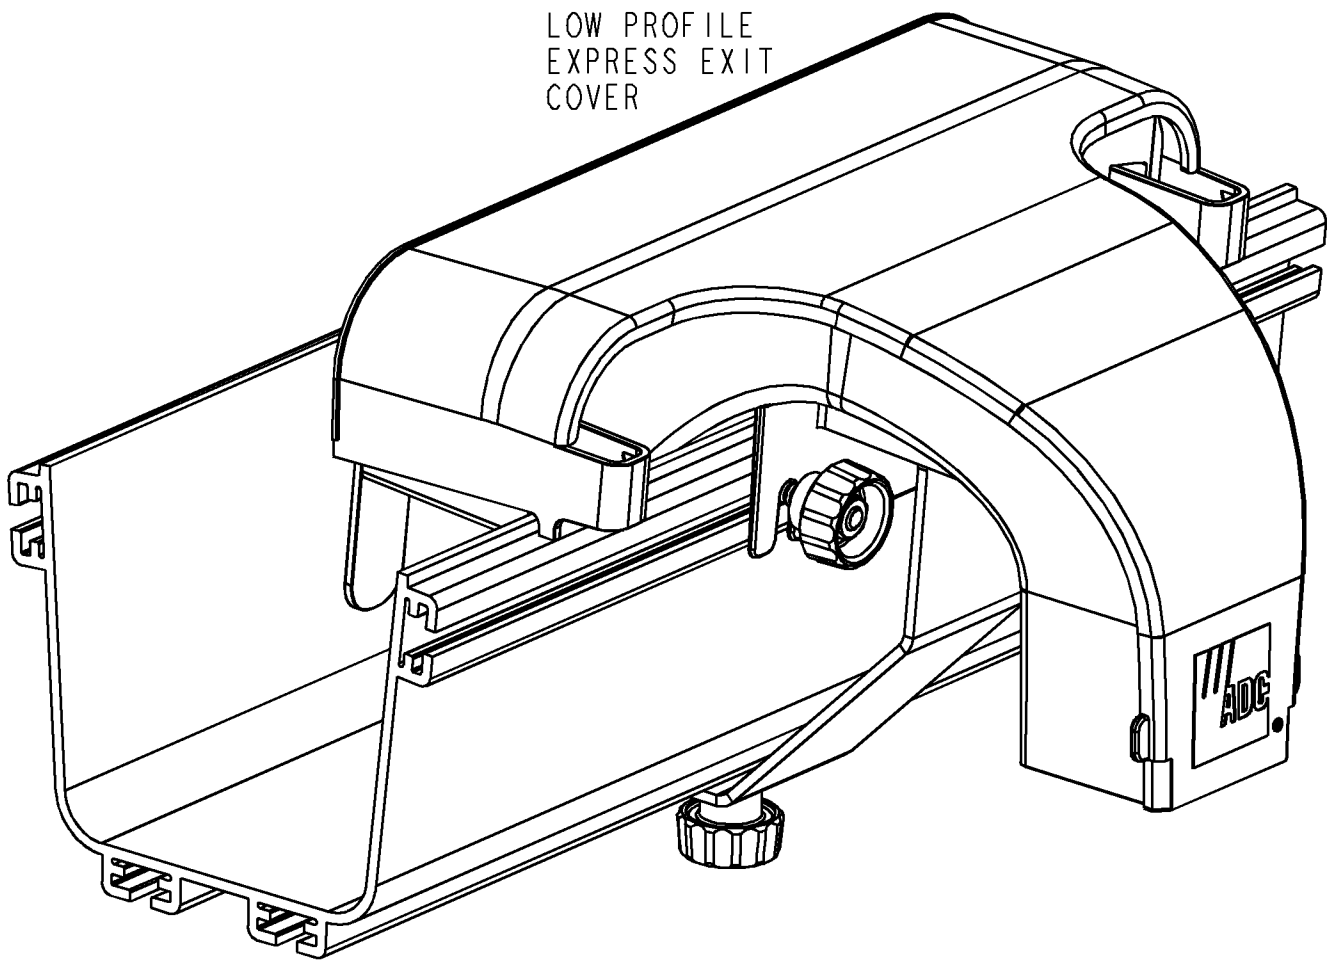


COVER ON VIEW  
SCALE 0.500

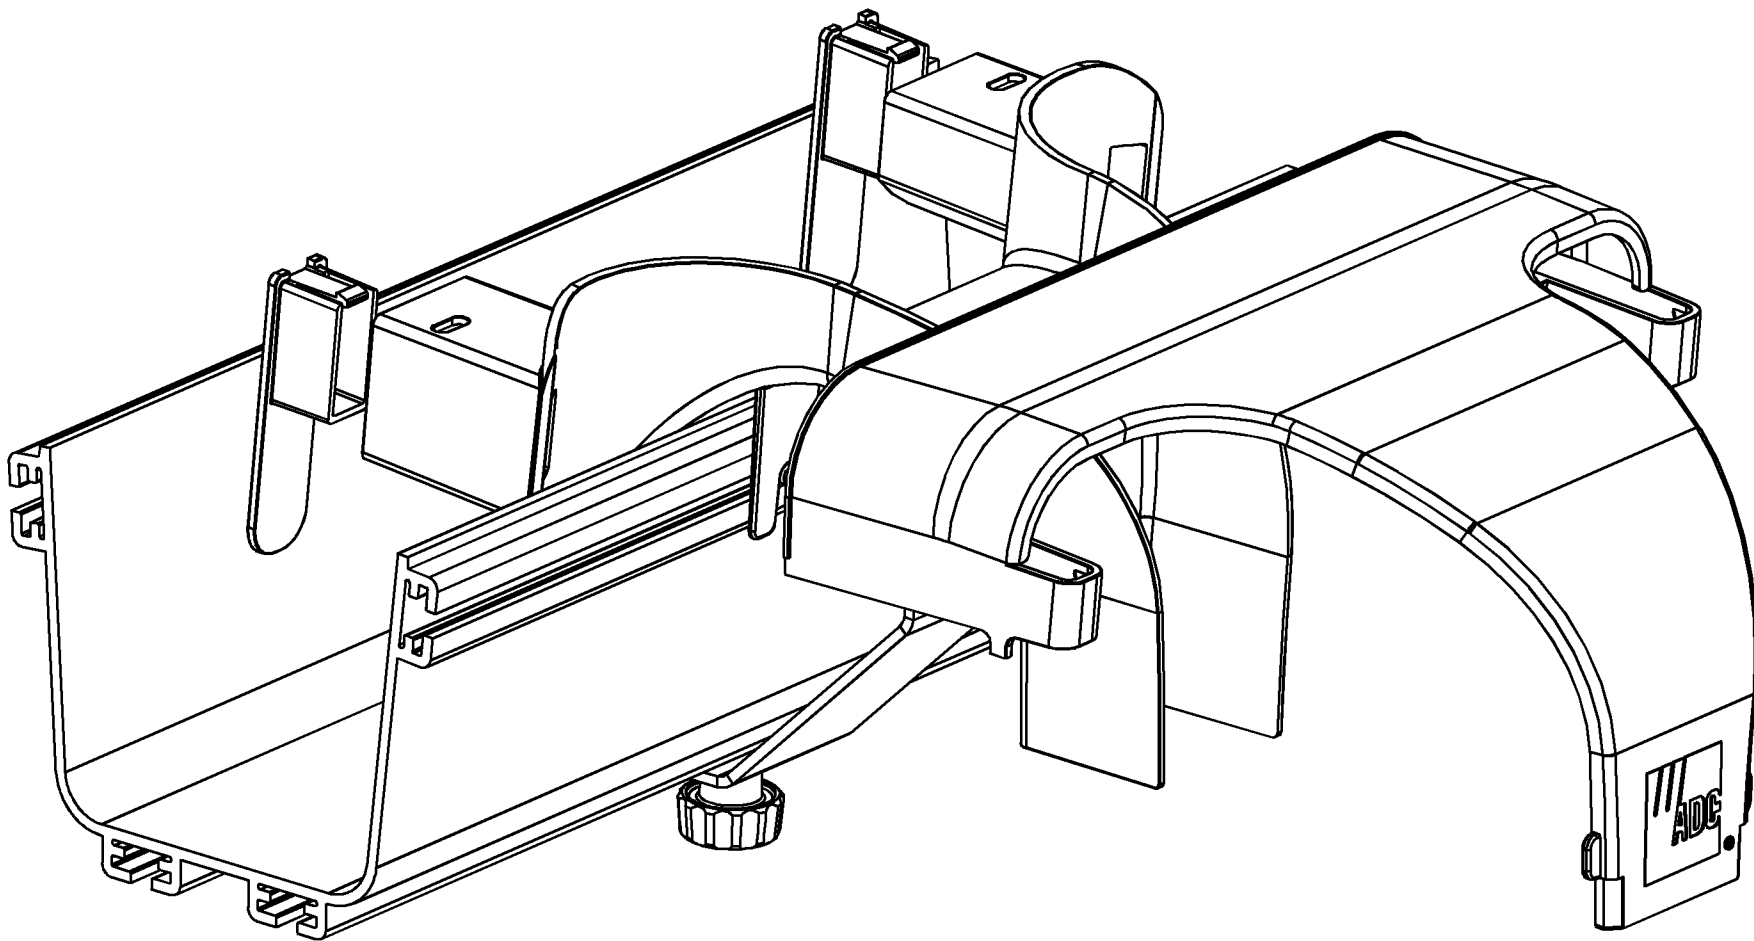

COVER OFF VIEW  
SCALE 0.500

PARTS LIST	
DESCRIPTION	QTY
LOW PROFILE EXPRESS EXIT	1
COVER, LOW PROFILE EXPRESS EXIT	1
BRACKET, FIBER RETAINING	2
BRACKET, LOW PROFILE EXPRESS EXIT	1
BRACKET, EXTENSION	1
QUICK KNOB ASSEMBLY	4
SCREW, 6-32 X .25	4

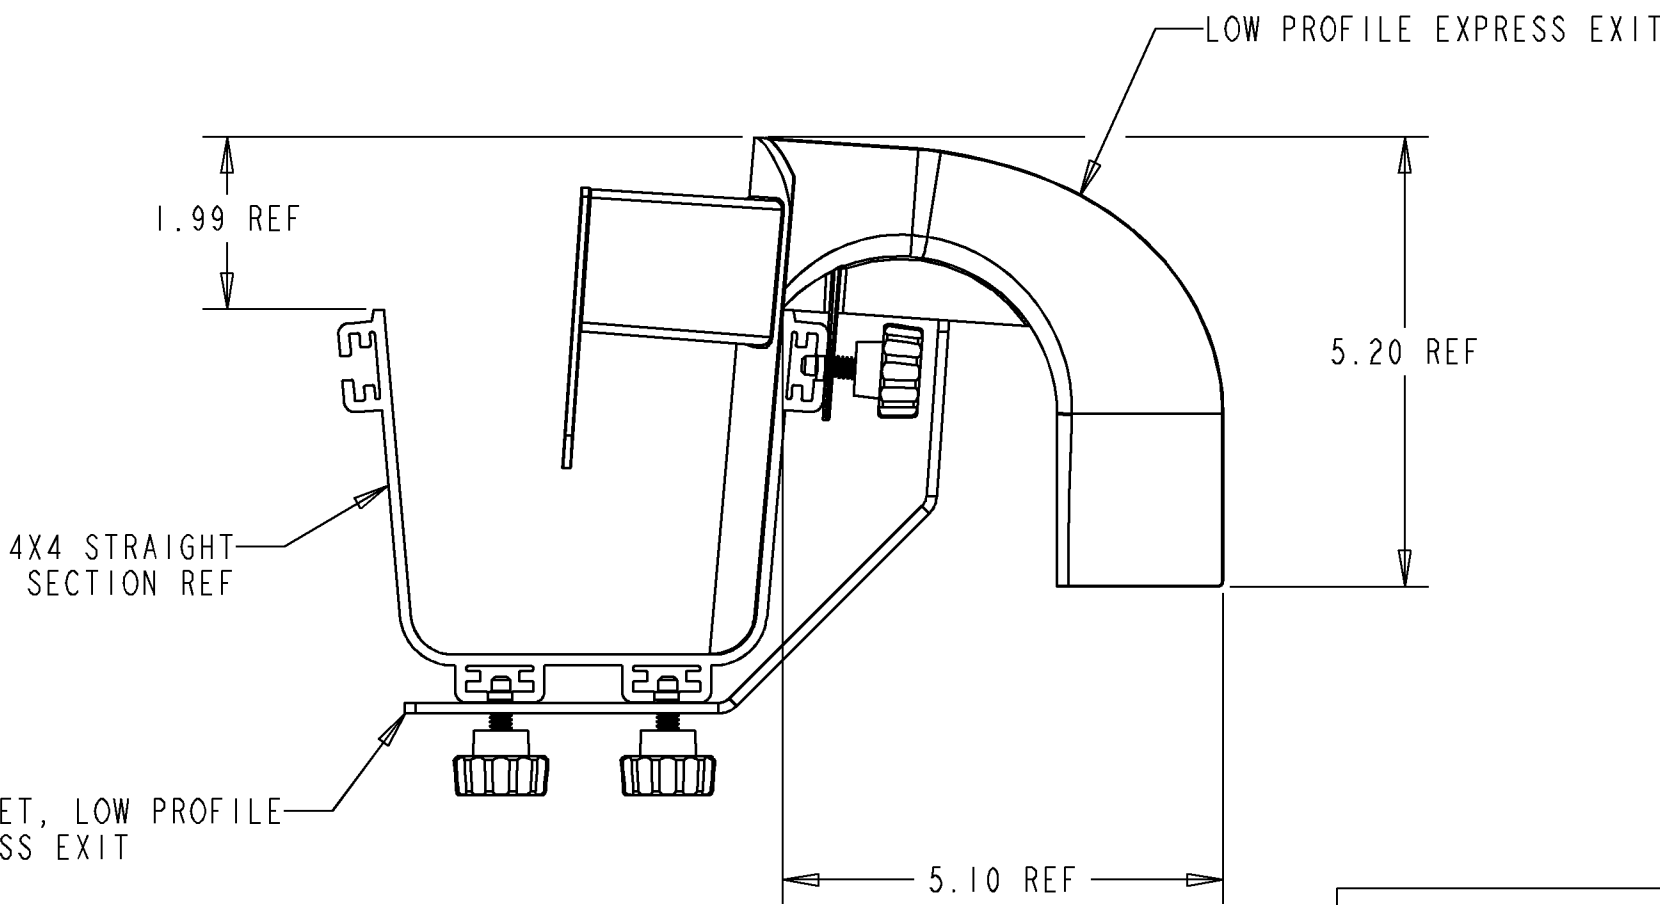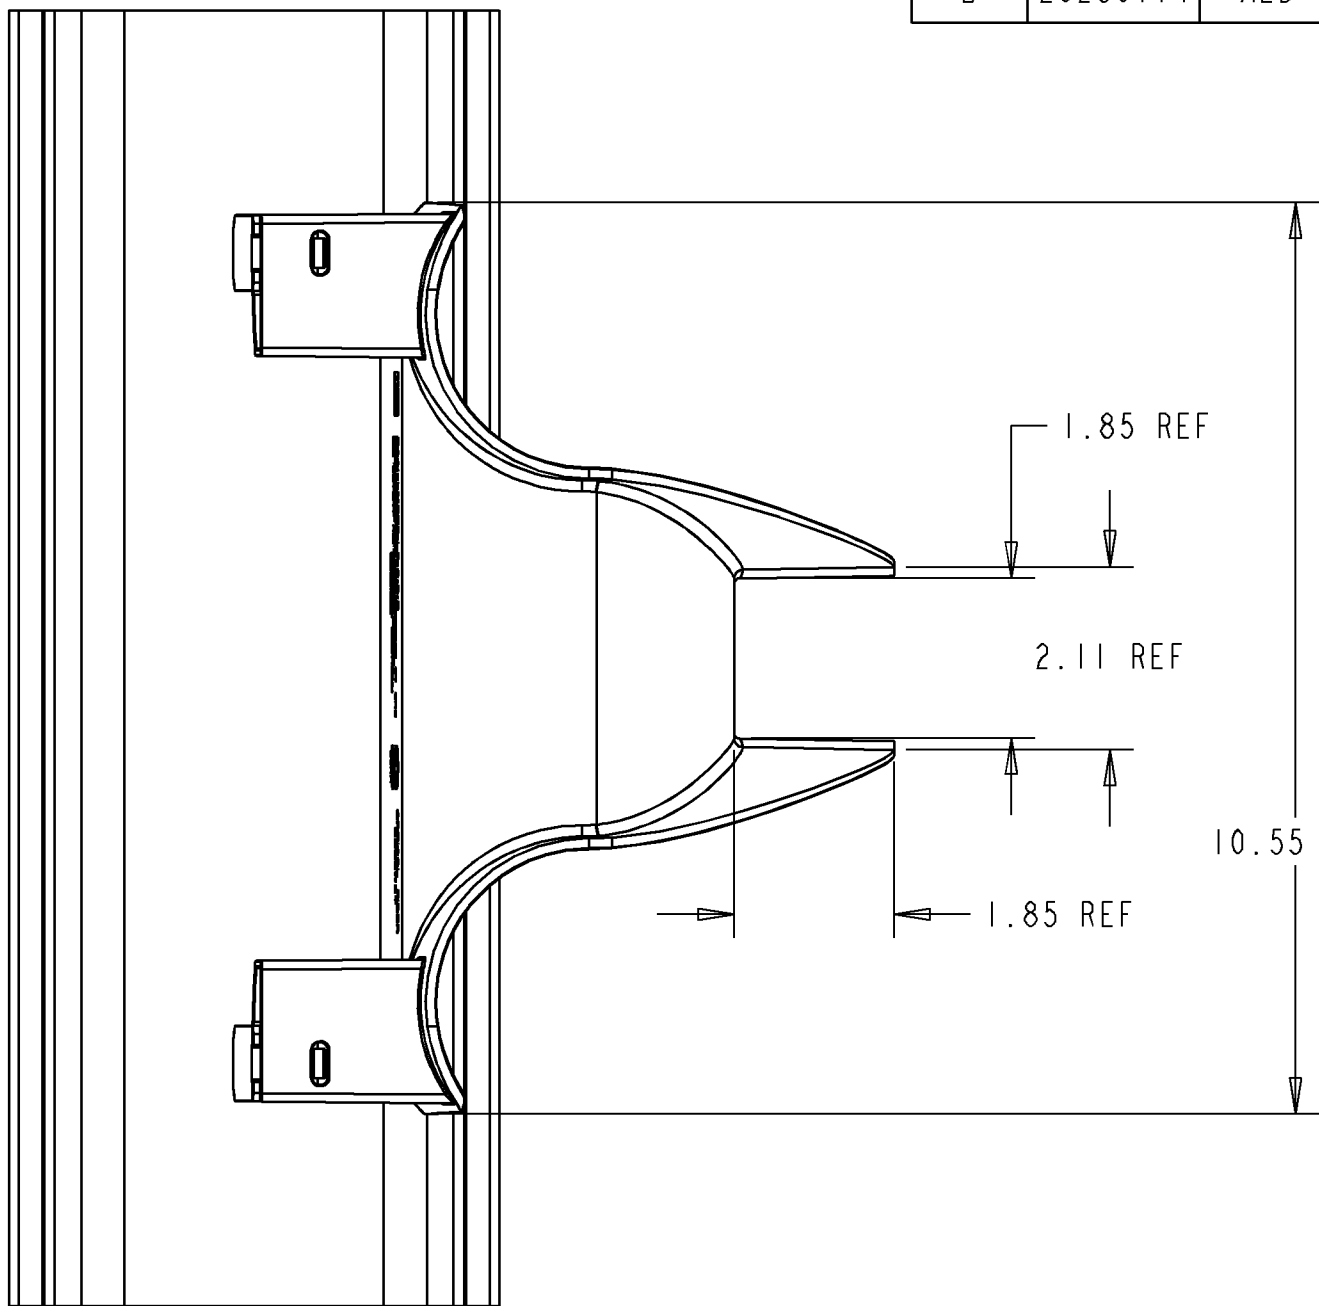

EXPRESS EXIT  
ON TROUGH VIEW  
SCALE 0.450

FGSB-MEXP-LP-A/B/F	BLACK
FGS0-MEXP-LP-A/B/F	ORANGE
FGS-MEXP-LP-A/B/F	YELLOW
CATALOG NO.	COLOR



INFORMATION ON THIS DOCUMENT IS  
PROPRIETARY TO ADC AND SHALL  
NOT BE USED, COPIED, REPRODUCED  
OR DISCLOSED IN WHOLE OR IN PART  
WITHOUT WRITTEN CONSENT OF ADC.

ALL DIMS AND TOLERANCES .XX:±N/A  
ARE INCHES UNLESS .XXX:±N/A  
OTHERWISE SPECIFIED ANGULAR:±N/A

DO NOT SCALE DRAWING



ENGR: JOHN VAN SCOY  
DWN: M. WENTWORTH

TITLE  
DWSPT, EXP, 1X4  
INSTALLATION DWG

DRAWING NUMBER  
1146047

SHT. 1 OF 3

DIMENSIONS IN INCHES  
THIRD ANGLE PROJECTION

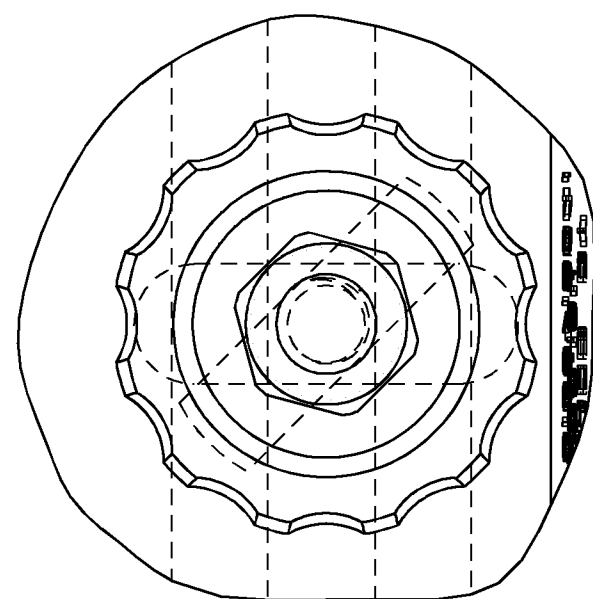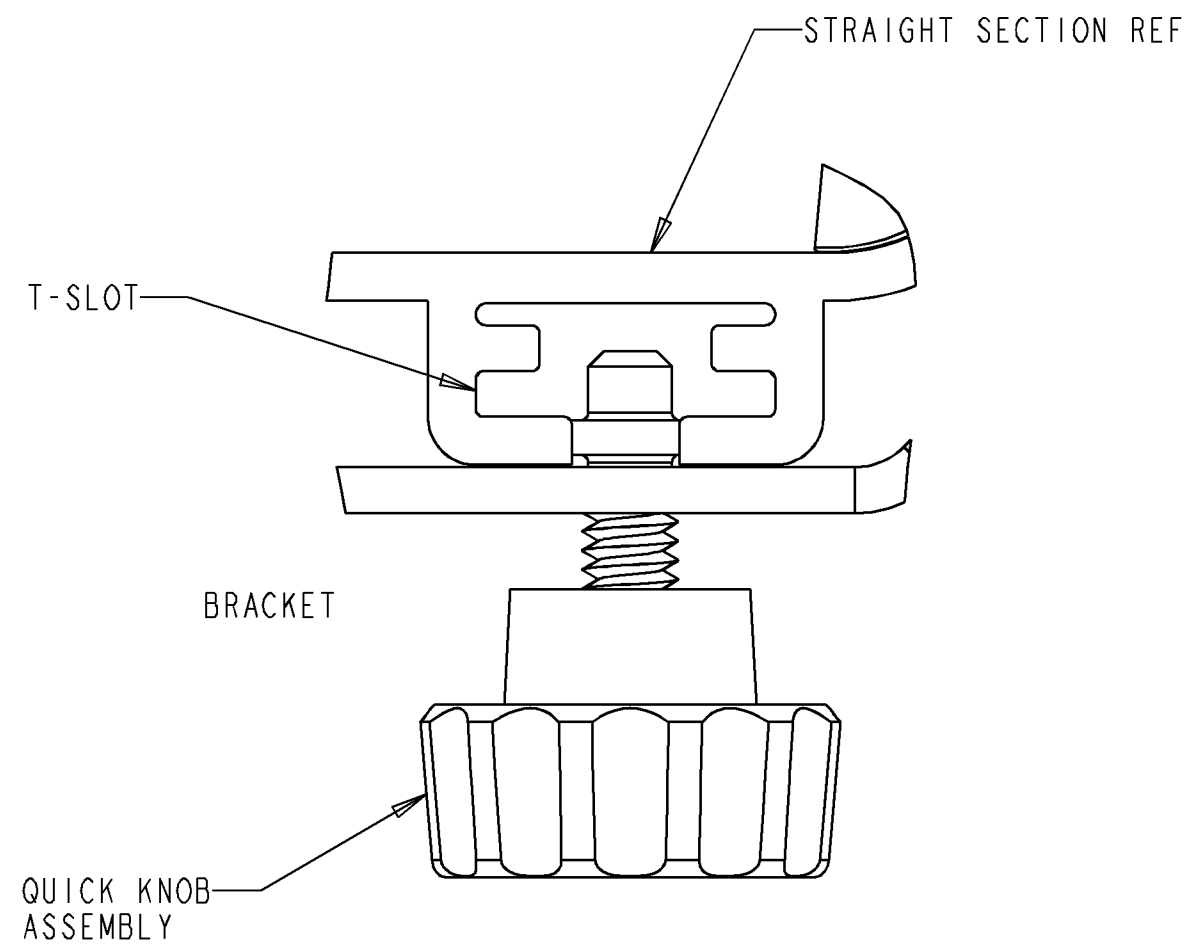


DETAIL A  
QUICK KNOB  
INSTALLATION VIEW  
SCALE 2.000

# INSTALLATION INSTRUCTIONS:

1. PLACE LOW PROFILE EXPRESS EXIT ON STRAIGHT SECTION AS SHOWN.
2. LIFT ONE END OF LOW PROFILE EXPRESS EXIT AND INSTALL QUICK KNOBS INTO T-SLOT, LOWER EXPRESS EXIT ONTO STRAIGHT SECTION. REPEAT FOR OTHER SIDE. ROTATE QUICK KNOBS CLOCKWISE SUCH THAT T-BOLT FLANGES EXTEND INTO T-SLOT. LOOSELY HAND TIGHTEN QUICK KNOBS. SEE DETAIL A

**\*WARNING:** IF LOW PROFILE EXPRESS EXIT IS REMOVED FROM STRAIGHT SECTION WHILE QUICK KNOBS ARE INSTALLED, QUICK KNOBS WILL FALL OUT.



3. ATTACH EXTENSION BRACKET TO LOW PROFILE EXPRESS EXIT BRACKET USING 6-32 X .25 LONG SCREWS. (4X6 AND 4X12 STRIGHT SECTIONS ONLY)
4. INSERT QUICK KNOBS THROUGH BRACKET, ROTATE 90 AND INTO T-SLOT IN STRAIGHT SECTION WHILE INSERTING INTO SLOT ON THE LOW PROFILE EXPRESS EXIT. ROTATE QUICK KNOBS CLOCKWISE SUCH THAT T-BOLT FLANGES EXTEND INTO T-SLOT. SEE DETAIL A.
5. TIGHEN (4) QUICK KNOBS COMPLETELY.

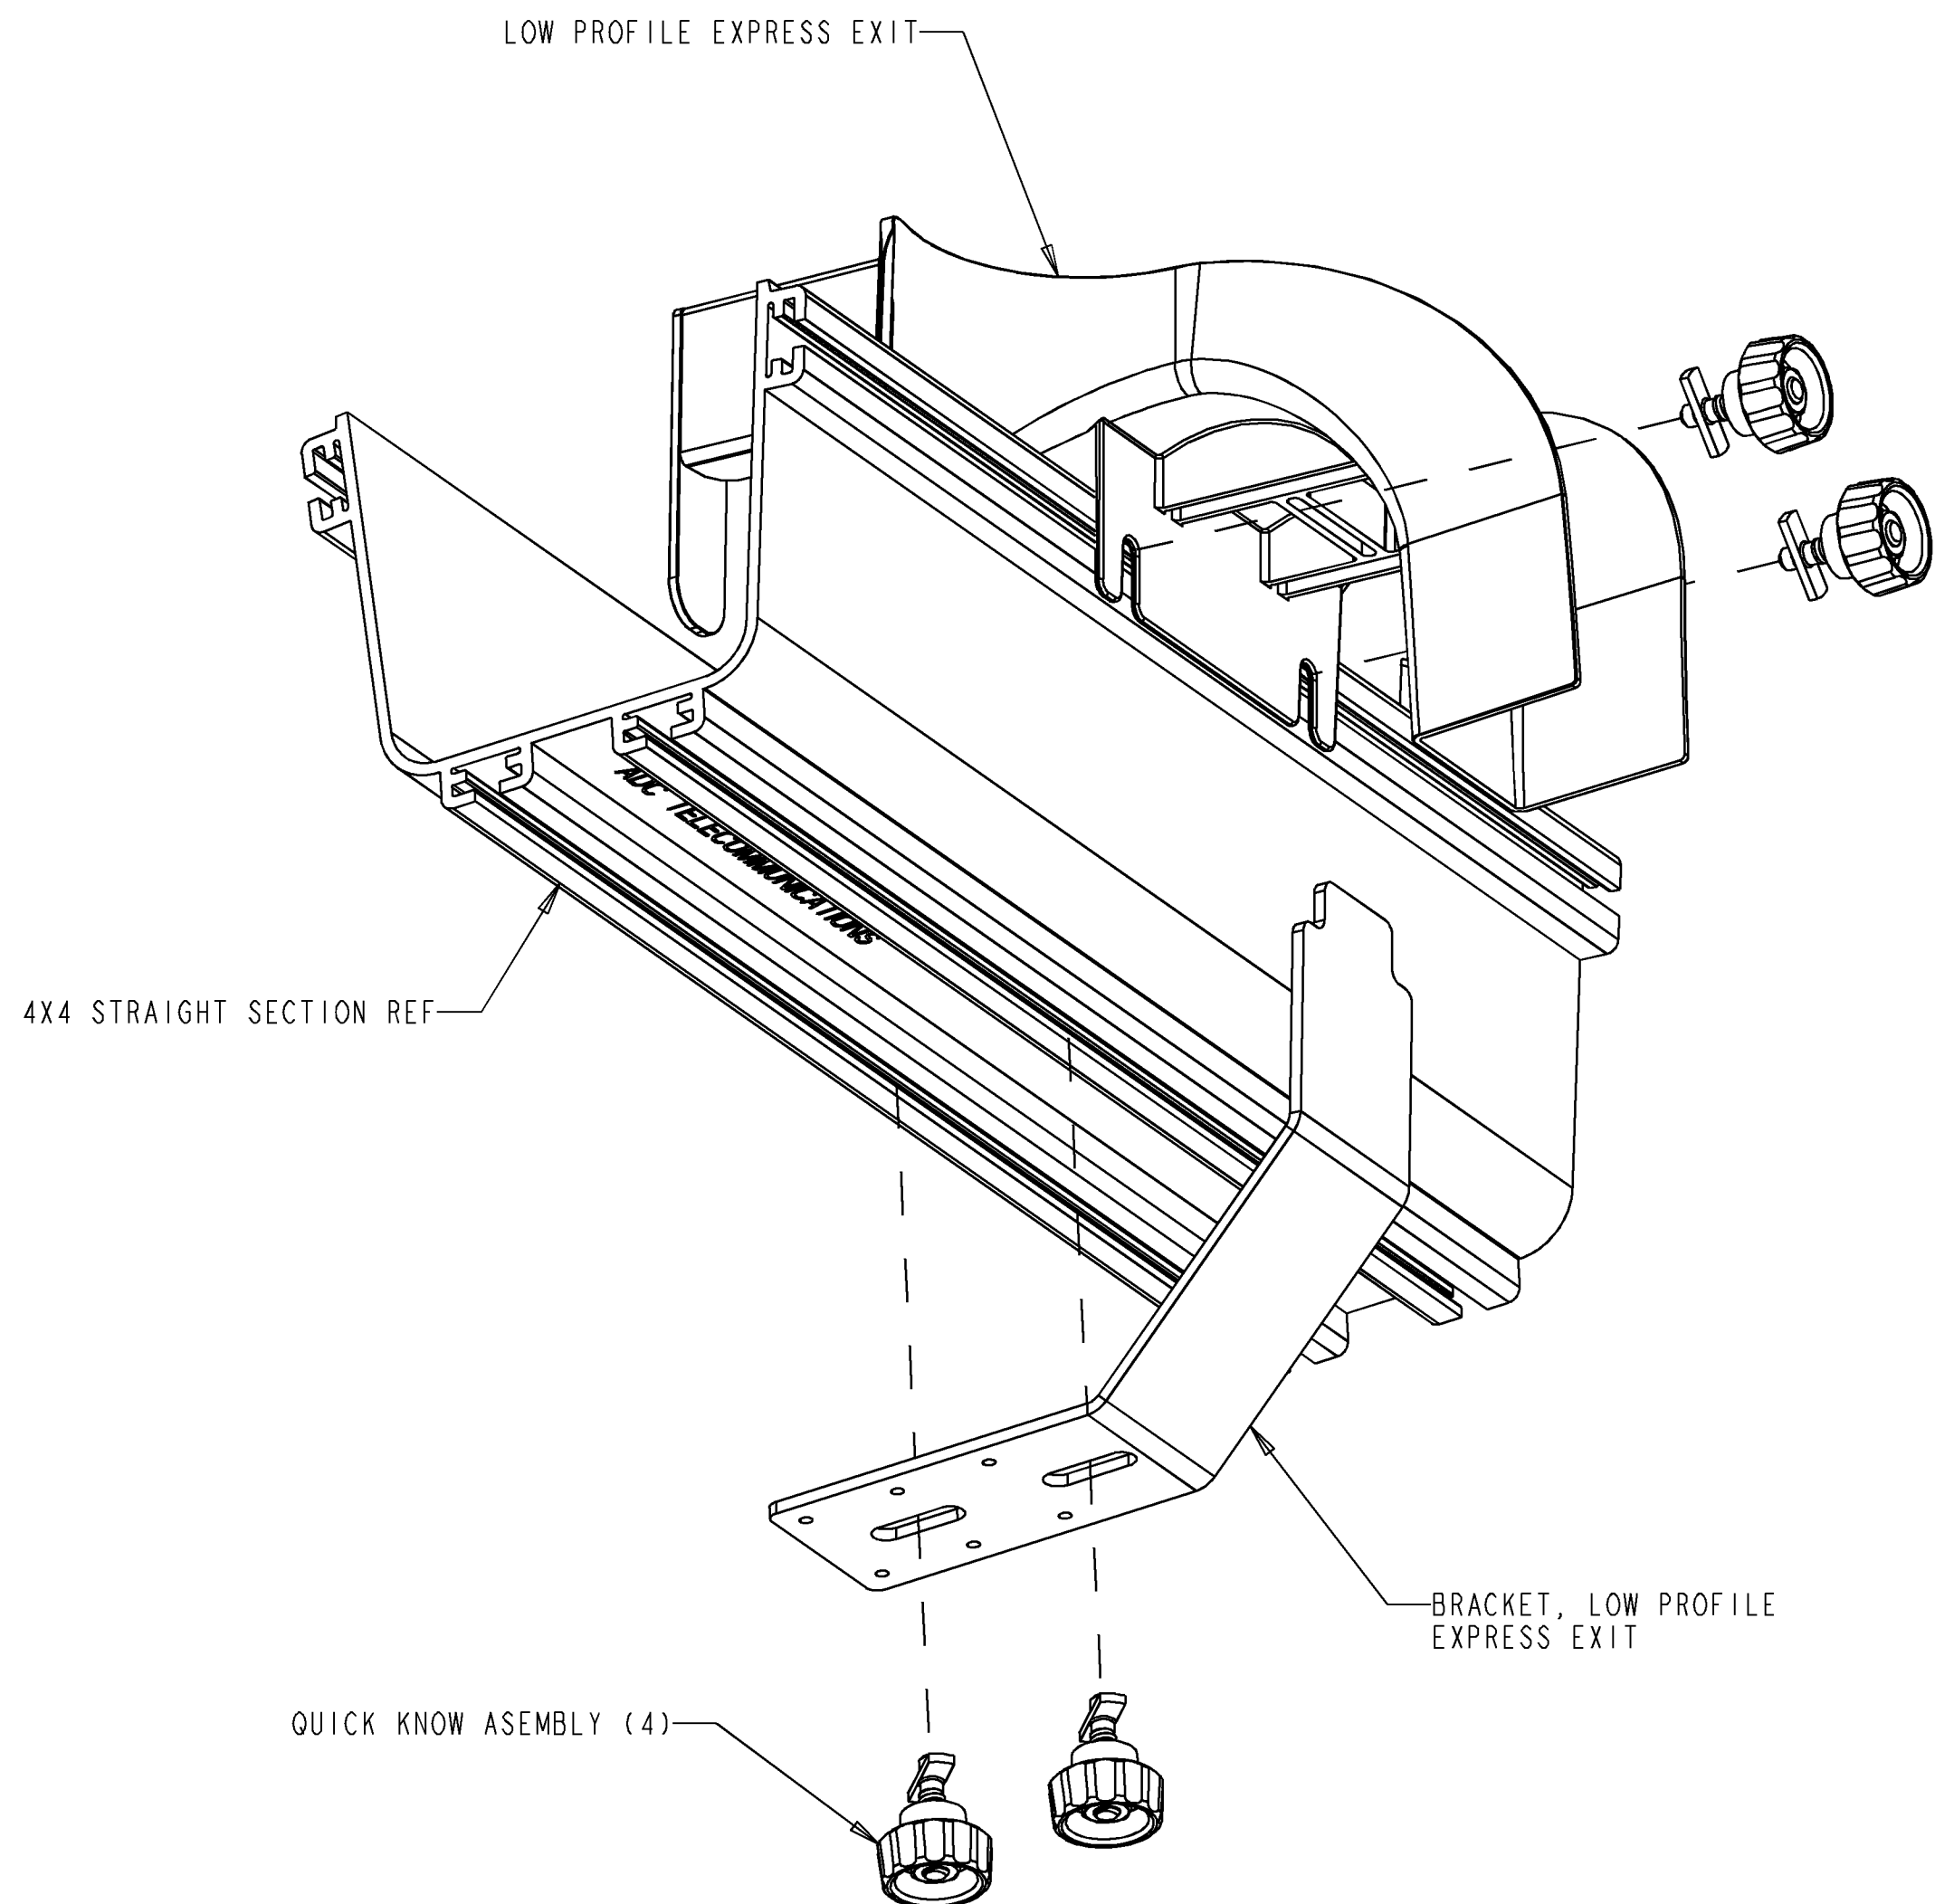

LOW PROFILE EXPRESS  
EXIT INSTALLATION  
4X4 STRAIGHT SECTION  
SCALE 0.600



INFORMATION ON THIS DOCUMENT IS PROPRIETARY TO ADC AND SHALL NOT BE USED, COPIED, REPRODUCED OR DISCLOSED IN WHOLE OR IN PART WITHOUT WRITTEN CONSENT OF ADC.		TITLE DWSPT, EXP, 1X4 INSTALLATION DWG	
ALL DIMS AND TOLERANCES ARE INCHES UNLESS OTHERWISE SPECIFIED	.XX:±N/A .XXX:±N/A ANGULAR:±N/A	C SIZE	DRAWING NUMBER 1146047
DO NOT SCALE DRAWING		ENGR: JOHN VAN SCOY DWN: M. WENTWORTH	B REV
		SHT. 2 OF 3	



DIMENSIONS IN INCHES  
THIRD ANGLE PROJECTION


A

B

C


D

LOW PROFILE  
EXPRESS EXIT

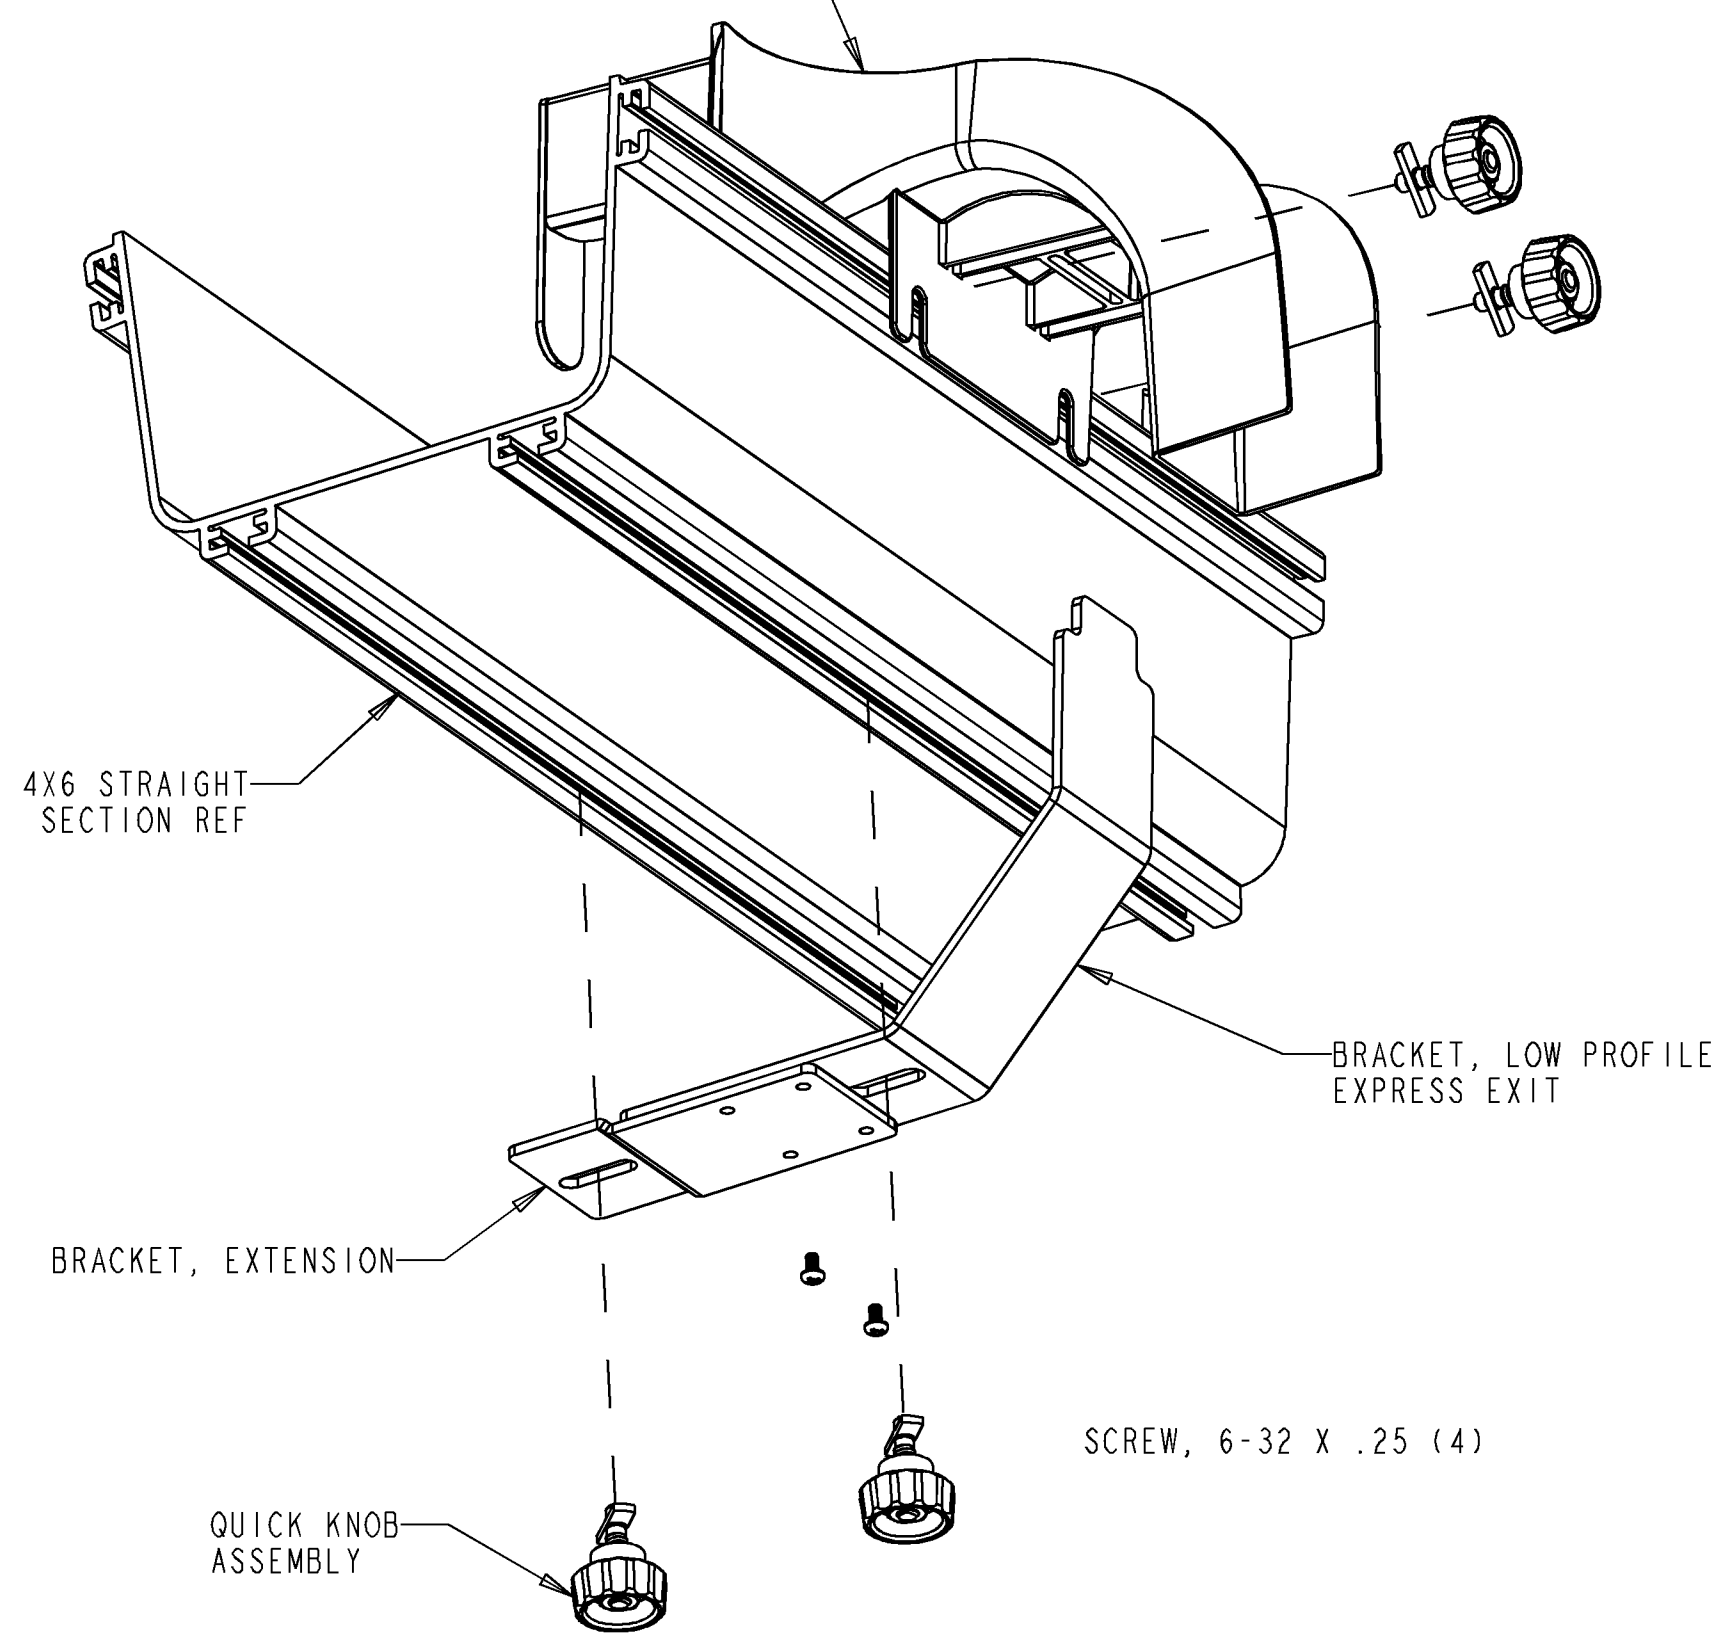

LOW PROFILE EXPRESS  
EXIT INSTALLATION  
4X6 STRAIGHT SECTION  
SCALE 0.450



LOW PROFILE  
EXPRESS EXIT

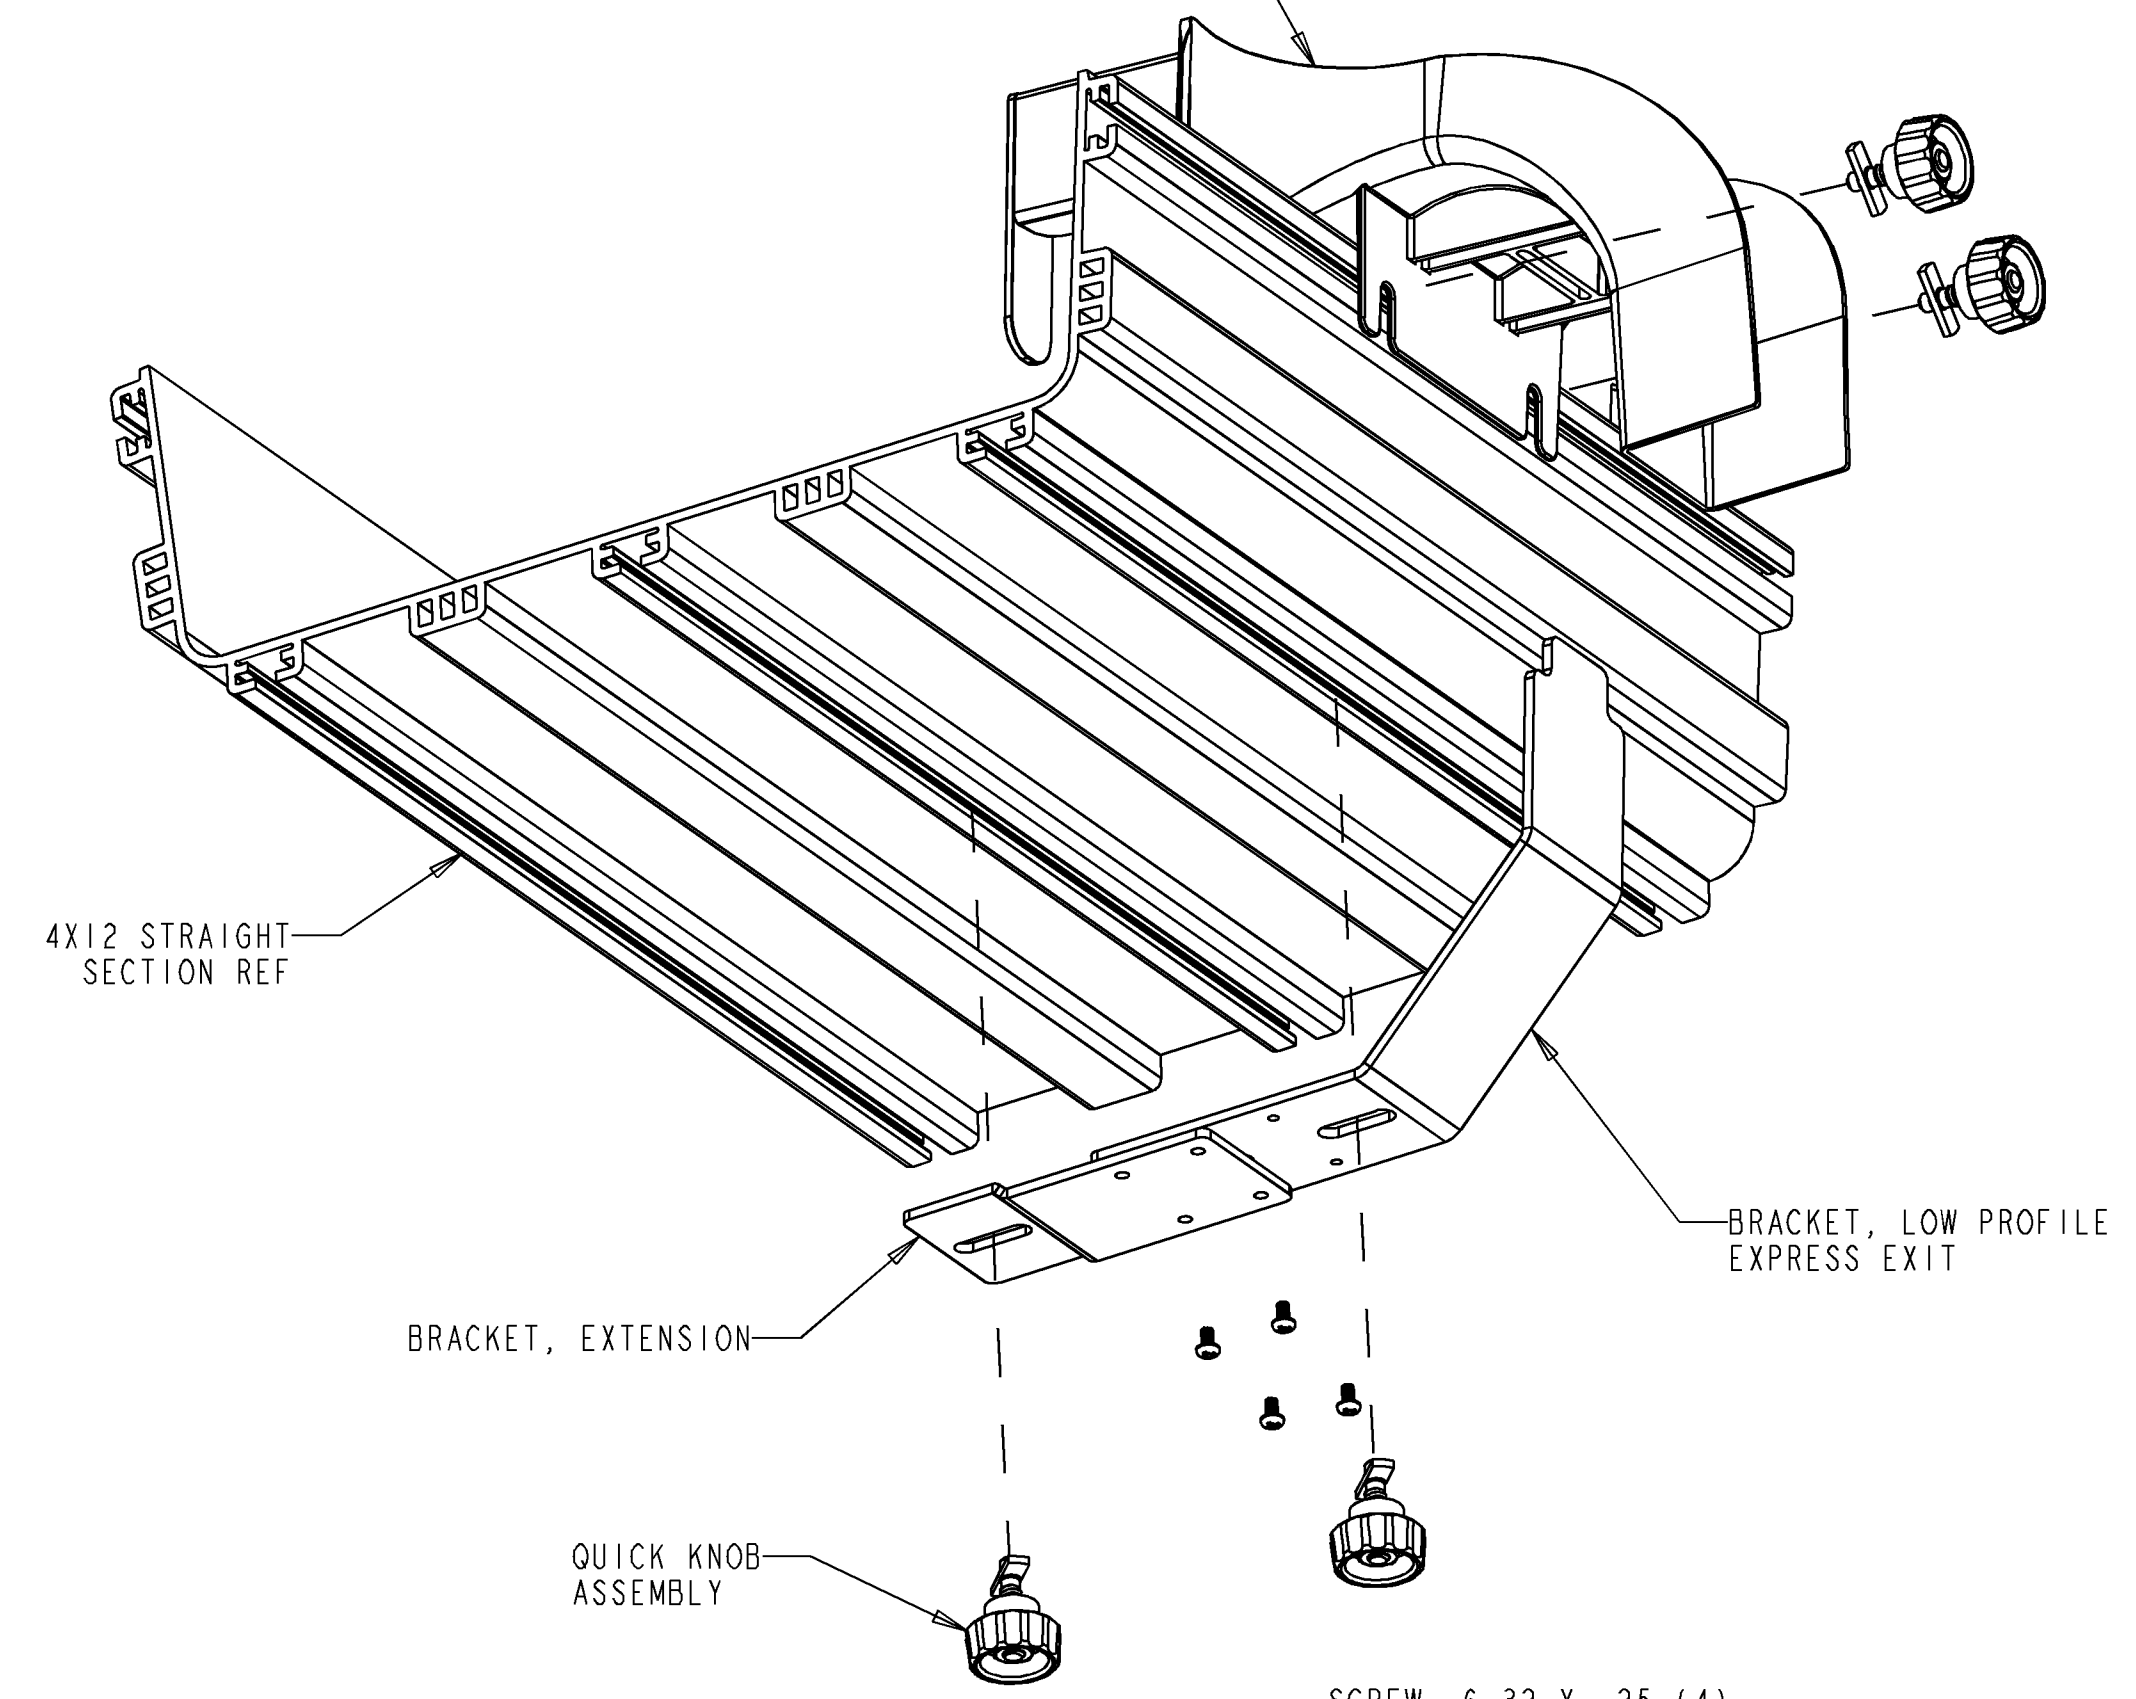

LOW PROFILE EXPRESS  
EXIT INSTALLATION  
4X12 STRAIGHT SECTION  
SCALE 0.450



INFORMATION ON THIS DOCUMENT IS PROPRIETARY TO ADC AND SHALL NOT BE USED, COPIED, REPRODUCED OR DISCLOSED IN WHOLE OR IN PART WITHOUT WRITTEN CONSENT OF ADC.		TITLE DWSPT, EXP, 1X4 INSTALLATION DWG	
ALL DIMS AND TOLERANCES ARE INCHES UNLESS OTHERWISE SPECIFIED	.XX:±N/A .XXX:±N/A ANGULAR:±N/A	C SIZE	DRAWING NUMBER 1146047
DO NOT SCALE DRAWING		ENGR: JOHN VAN SCOY DWN: M. WENTWORTH	B REV SHT. 3 OF 3



DIMENSIONS IN INCHES  
THIRD ANGLE PROJECTION

A

B

C